PRODUCT NO.232

ASAHI PENTAX SV

EXPLODED ILLUSTRATIONS

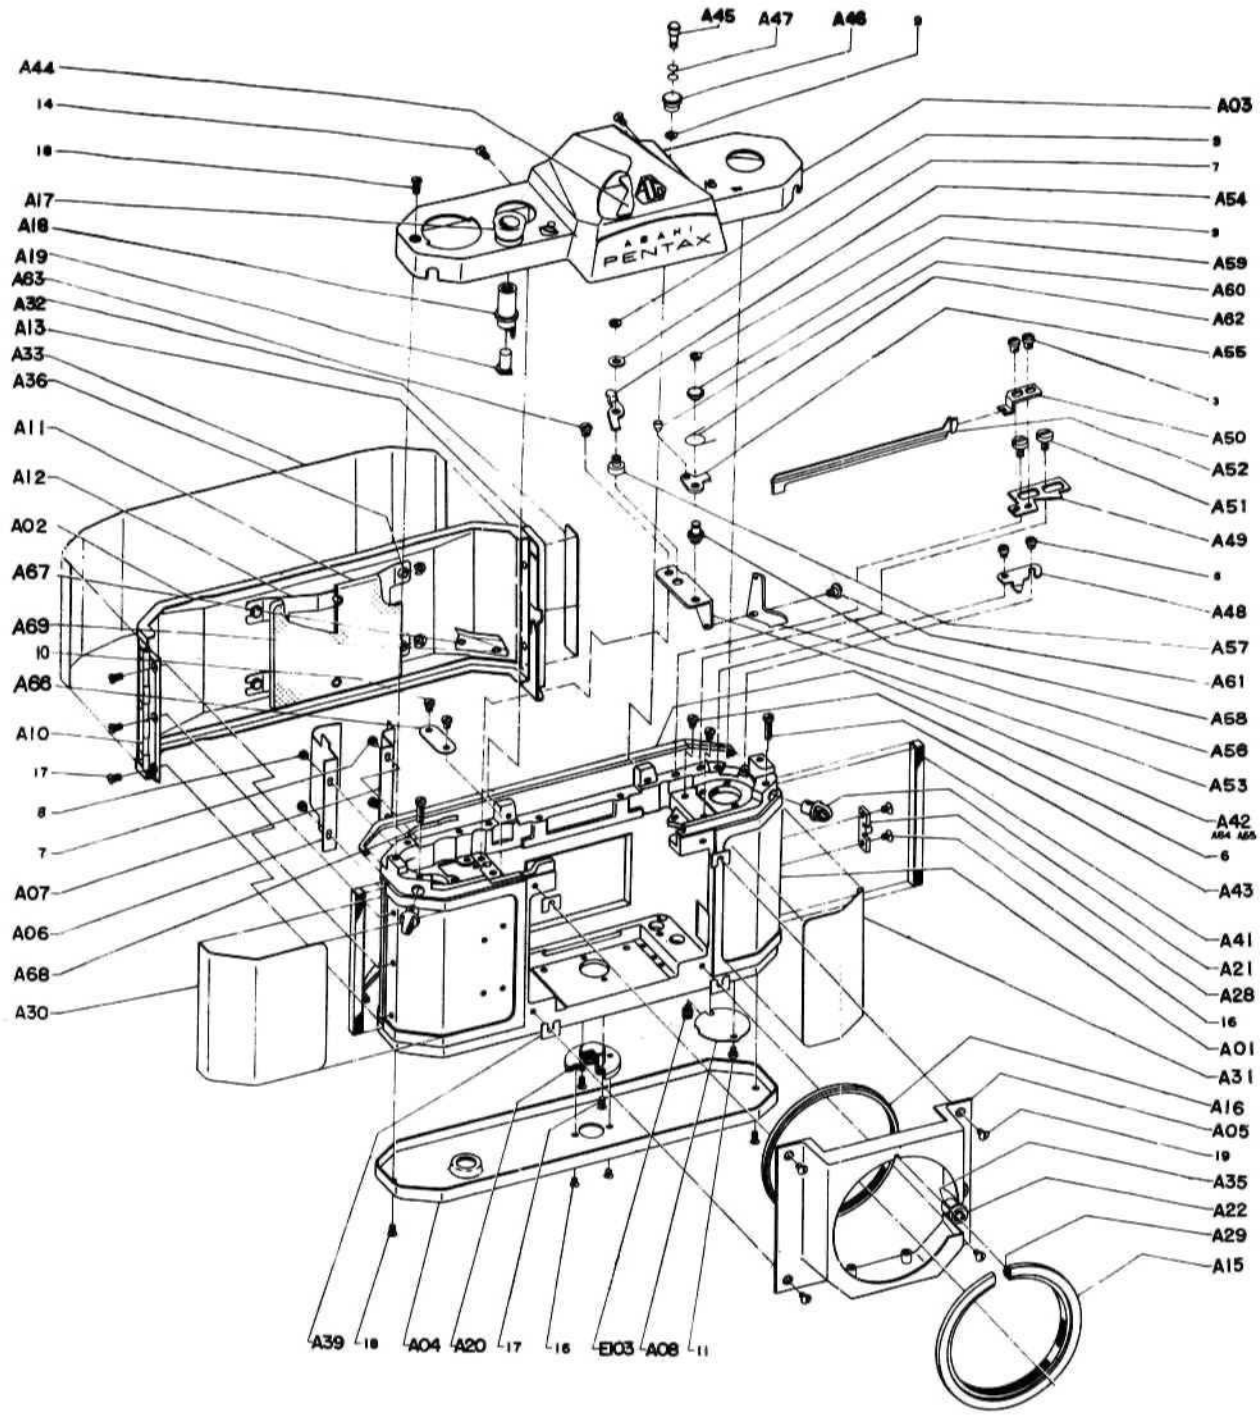

Fig.I

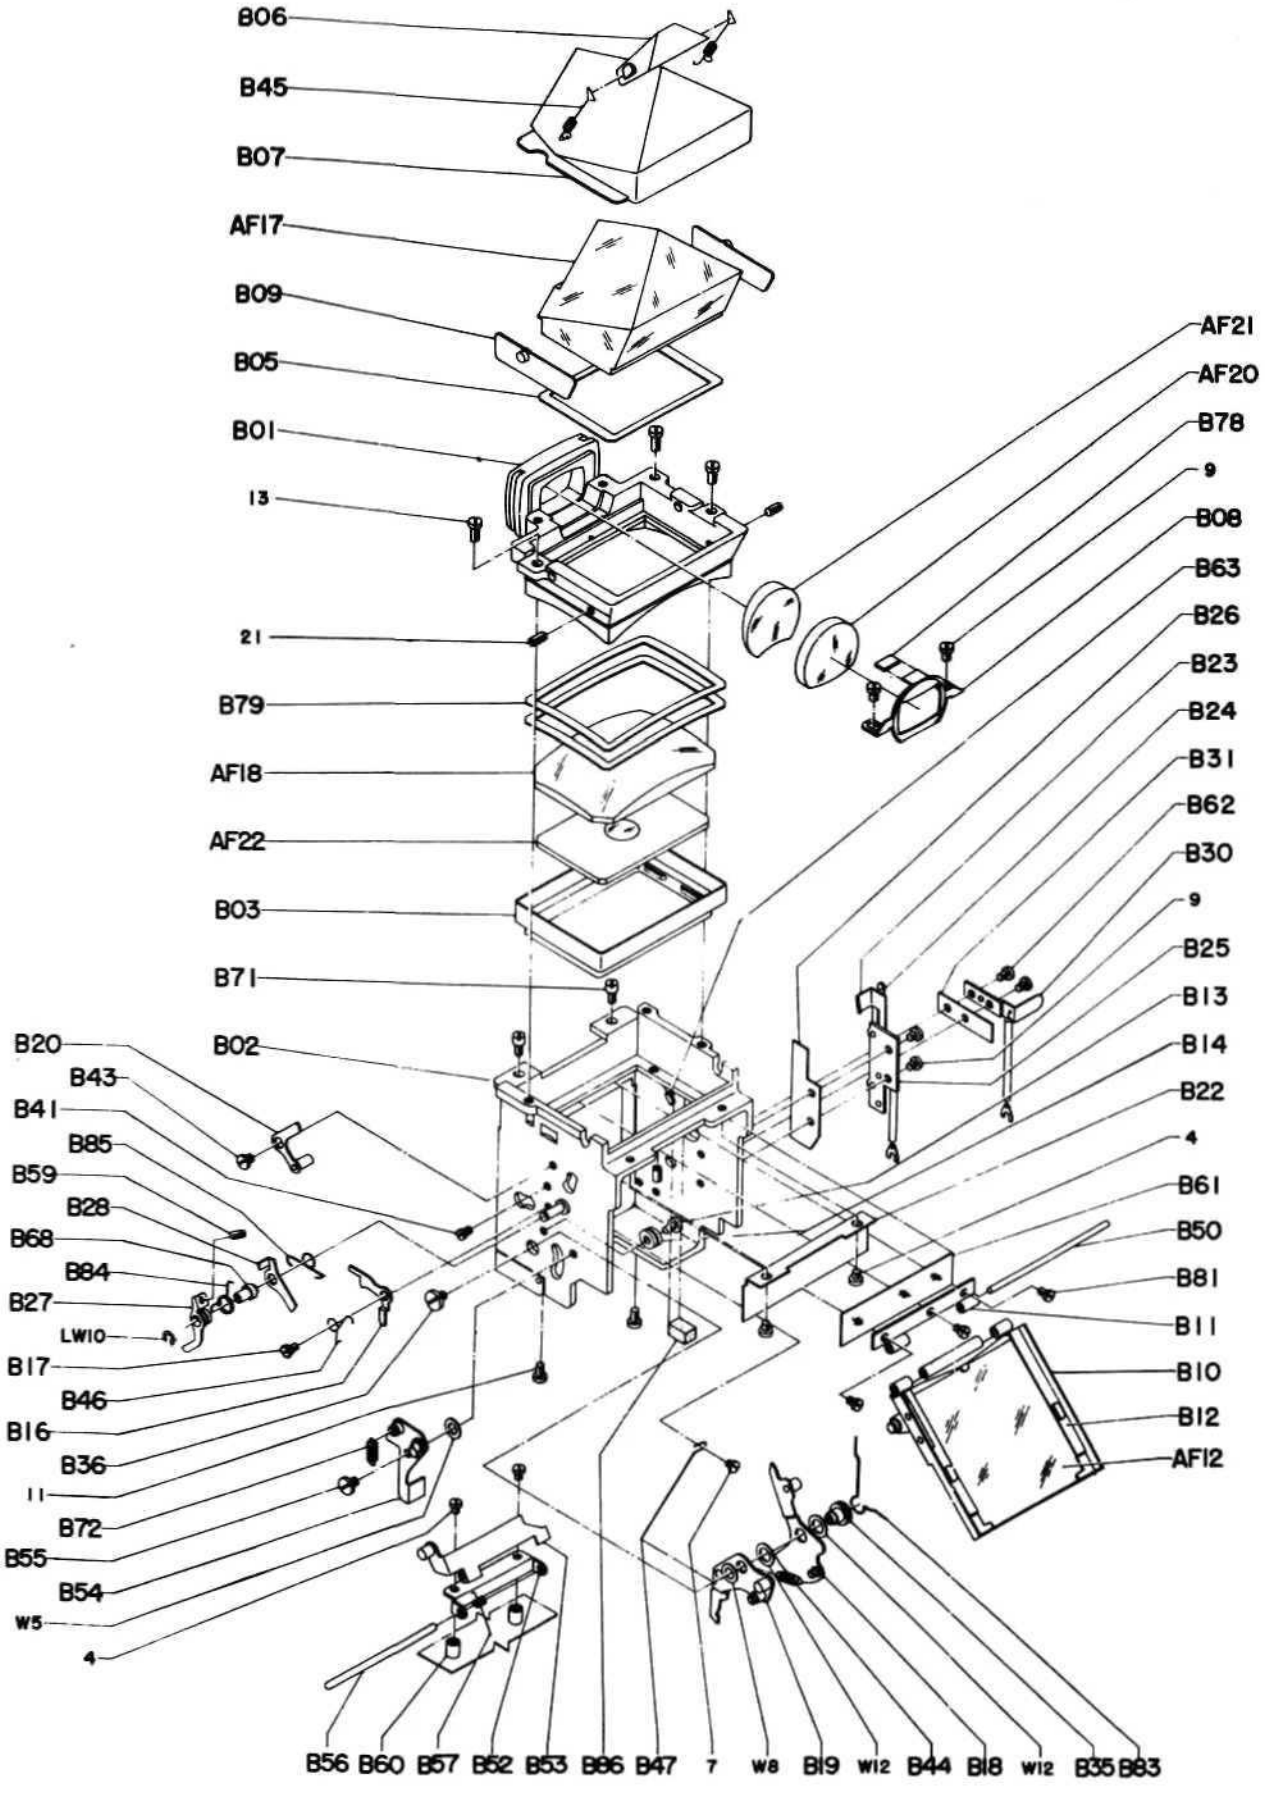
B06
B45
B07
AF17
B09
B05
B01
13
21
B79
AF18
AF22
B03
B71
B02
B20
B43
B41
B85
B59
B28
B68
B84
B27
LW10
B17
B46
B16
B36
11
B72
B55
B54
W5
4
B56
B60
B57
B52
B53
B86
B47
7
W8
B19
W12
B44
B18
W12
B35
B83
AF21
AF20
B78
9
B08
B63
B26
B23
B24
B31
B62
B30
9
B25
B13
B14
B22
4
B61
B50
B81
B11
B10
B12
AF12

Fig.2

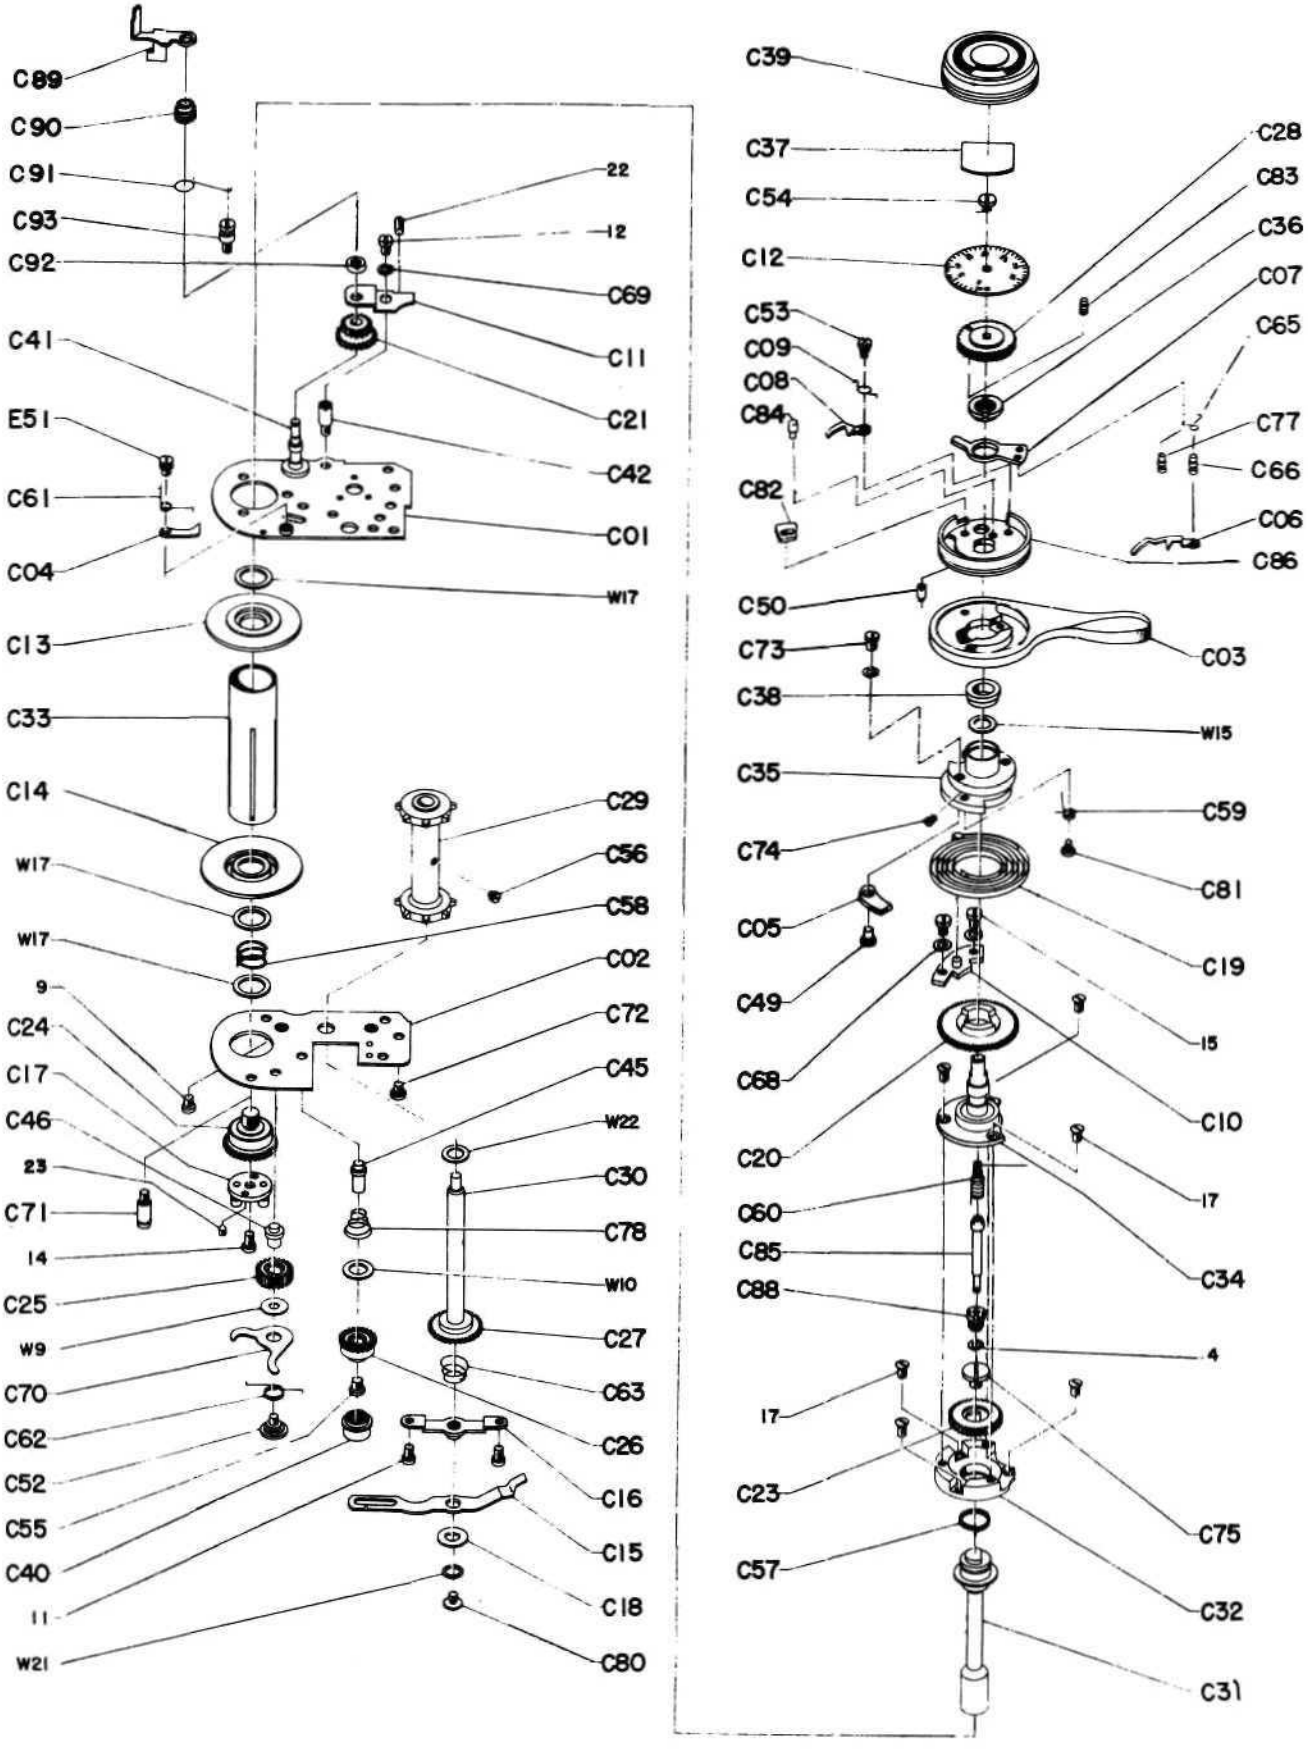
C89
C90
C91
C93
C92
C41
E51
C61
C04
C13
C33
C14
W17
W17
W17
9
C24
C17
C46
23
C71
14
C25
W9
C70
C62
C52
C55
C40
11
W21
22
12
C69
C11
C21
C42
C01
W17
C29
C56
C58
C02
C72
C45
W22
C30
C78
W10
C27
C63
C26
C16
C15
C18
C80
C39
C37
C54
C12
C53
C09
C08
C84
C82
C50
C73
C38
C35
C74
C05
C49
C68
C20
C60
C85
C88
17
C23
C57
C28
C83
C36
C07
C65
C77
C66
C06
C86
C03
W15
C59
C81
C19
15
C10
17
C34
4
C75
C32
C31

Fig. 3

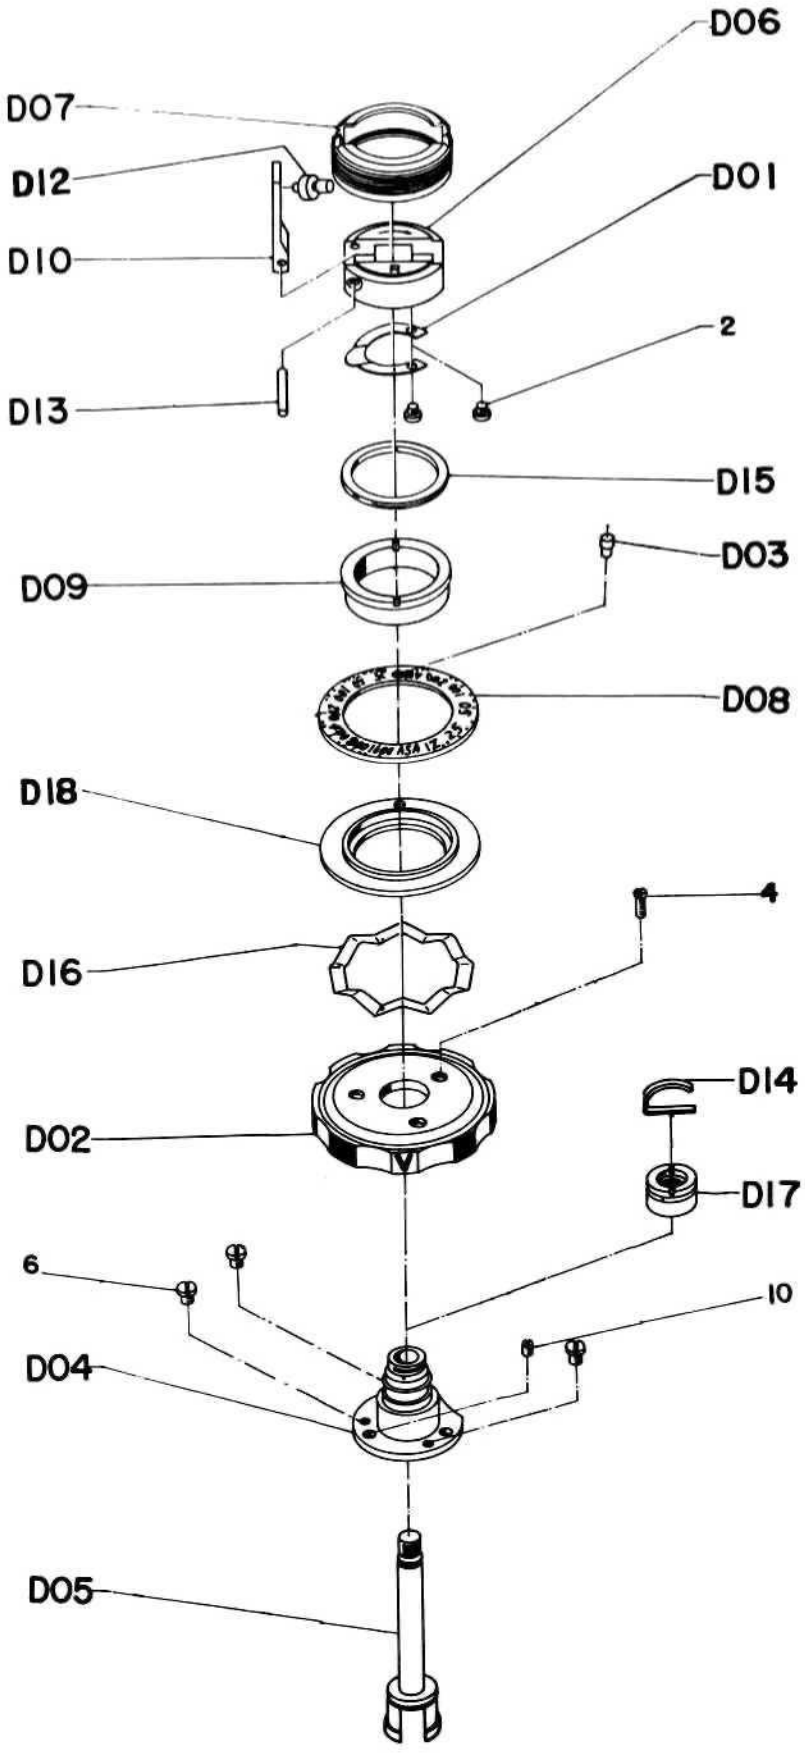
D06
D07
D12
D01
D10
2
D13
D15
D03
D09
D08
D18
4
D16
D14
D02
D17
6
10
D04
D05

Fig.4

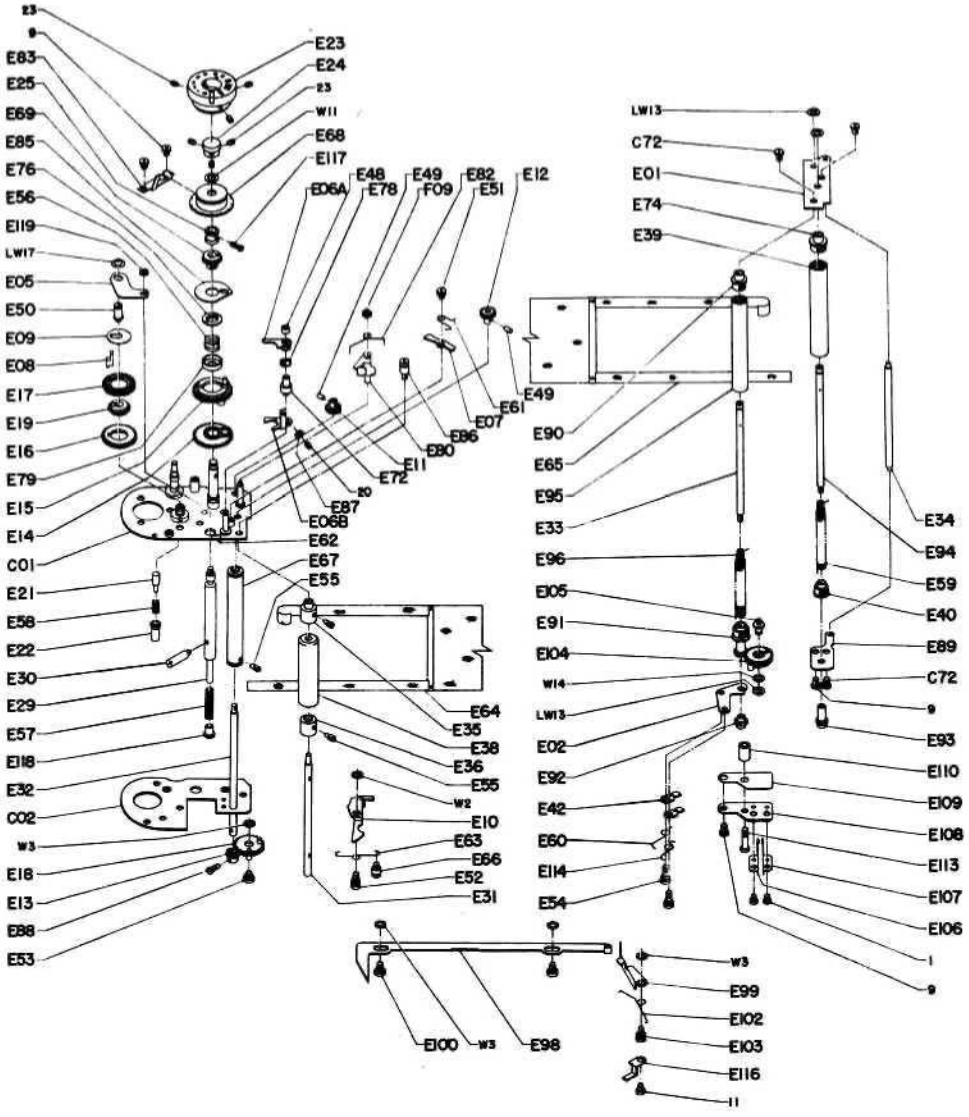
E23
E24
E68
E117
E48
E78
E49
F09
E82
E51
E12
E06A
E49
E61
E07
E86
E80
E11
E72
E87
E06B
E62
E67
E55
E64
E35
E38
E36
E55
E10
E63
E66
E52
E31
E100
E98
E34
E94
E59
E40
E89
C72
E93
E110
E109
E108
E113
E107
E106
E99
E102
E103
E116
E90
E65
E95
E33
E96
E105
E91
E104
E02
E92
E42
E60
E114
E54
E01
E74
E39
E69
E85
E76
E56
E119
E05
E50
E09
E08
E17
E19
E16
E79
E15
E14
C01
E21
E58
E22
E30
E29
E57
E118
E32
C02
E18
E13
E88
E53

Fig.5

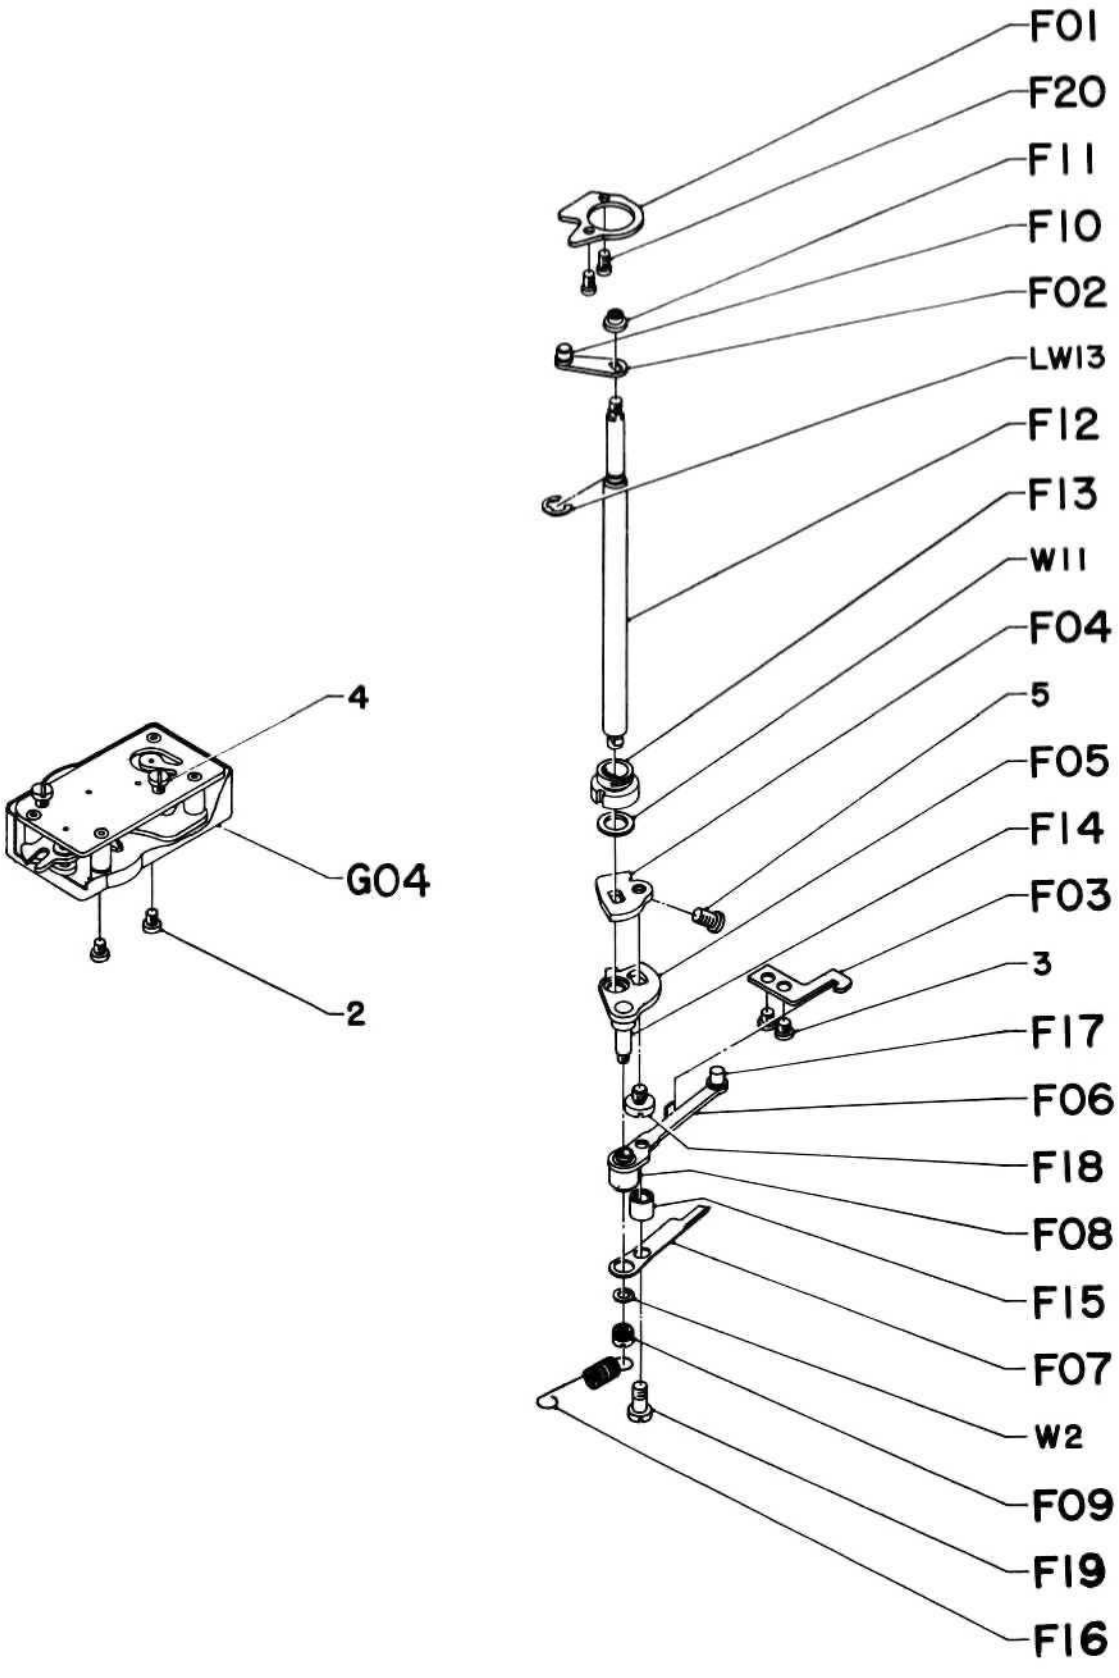
F01
F20
F11
F10
F02
LW13
F12
F13
W11
F04
5
F05
F14
F03
3
F17
F06
F18
F08
F15
F07
W2
F09
F19
F16
4
G04
2

Fig.6

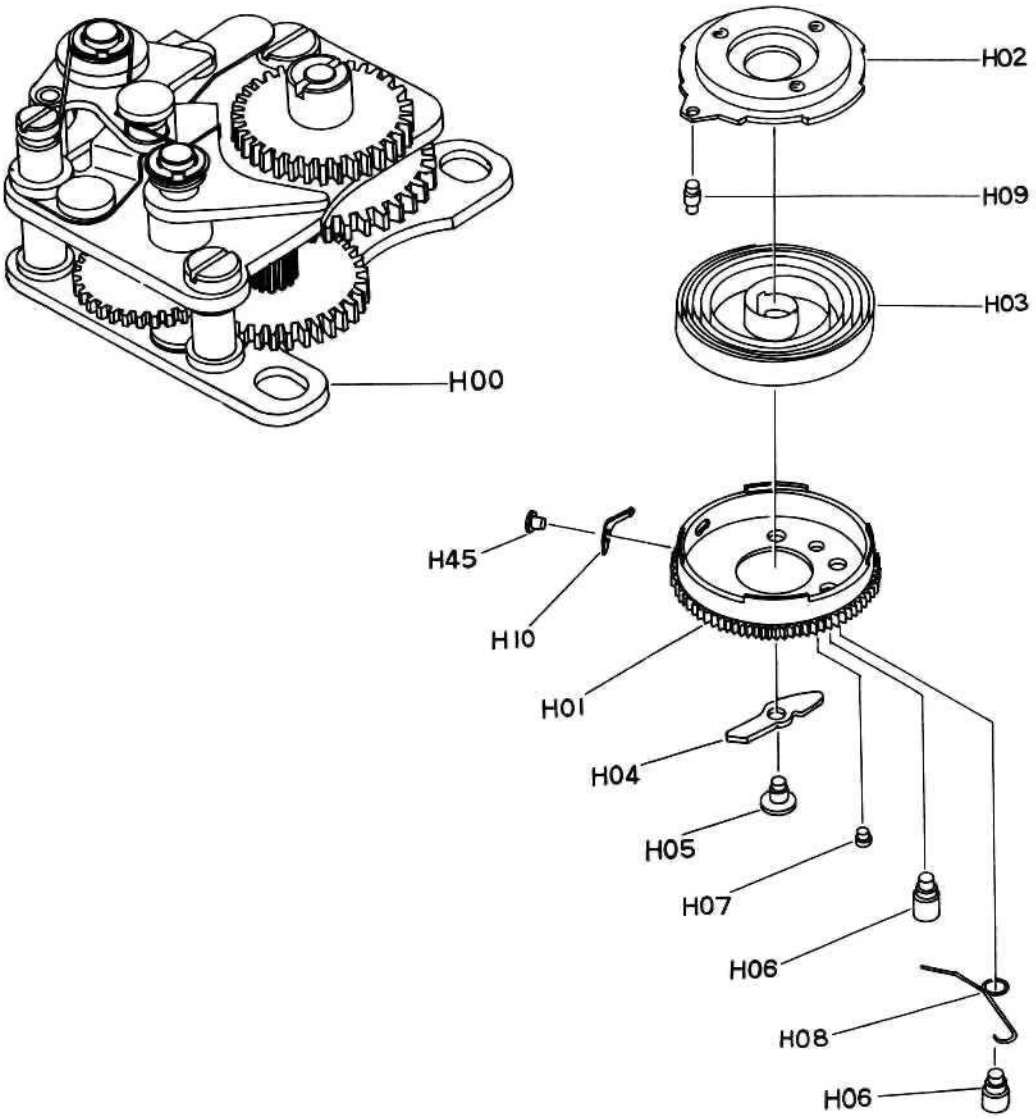

Fig.7

LIST OF SERVICE PARTS

Product No. 232

ASAHI PENTAX SV

Note: The parts with numbers starting with '0' are assembled parts; the *marked parts are included in the '0' starting assembled parts; and these marked with 'o' are same as the parts for Product No. 230-2.

PART NO.		DESCRIPTION	QUANTITY
0A01		Body proper assembly (A01, E118)	1
0A02		Back cover assembly (A02, A09, A10, A13, A14, A25, A27, A32, A33, A34, A36, A37, A67, A69)	1
0A03		Top cover assembly (A03, A17, A40, A45, A46, A47, LW13)	1
A04	o	Bottom cover	1
0A05	o	Front cover assembly (A05, A15, A16, A22, A23, A24, A29, A35, B51, B52, B53, B56, B57, B60, small screw FM 1.4x2)	1
A06	o	Sprocket cover	1
A07	o	Light seal	1
A08	o	Cassette receptacle	1
A09 *	o	Cassette holder	1
A10 *	o	Hinge	1
0A11	o	Pressure plate assembly (All, A12, A26)	1
A12 *	o	Pressure plate spring	1
A13 *	o	Key housing	1
A14 *	o	Back cover key	1
A15 *	o	Helicoid seat	1
A16 *	o	Helicoid seat retainer screw	1
A17 *	o	Shutter button seat	1
A18	o	Shutter button	1
A19	o	Shutter button shaft	1

A20	o	Tripod socket	1
A21	o	Strap hook	1
A22 *	o	Plug seat	1
A23 *	o	Outer pole	1
A24 *	o	Inner pole	1
A25 *	o	Pressure plate retainer stud A	2
A26 *	o	Pressure plate rivet	2
A27 *	o	Key housing column	2
A28	o	Key housing retainer plate	1
A29 *	o	Helicoid seat stopper	1
A30	o	Body covering, left	1
A31	o	Body covering, right	1
A32 *	o	Key housing covering	1
A33 *	o	Back cover covering	1
A34 *	o	Cassette holder rivet	2
A35 *	o	Earth	1
A36 *	o	Pressure plate retainer stud B	3
A37 *	o	Hinge rivet	3
A39	o	Front cover adjust washer (t = 0.05, 0.1, 0.15 and 0.2)	4
A40 *	o	Indicator window	1
A41	o	Light seal	2
A42	J	Light seal	1
A43	o	Strap hook screw	2
A45 *		Release button	1
A46 *		Release button seat	1
A47 *		Release button spring	1
A48		Self-timer box stopper	1
A49		Guide plate	1
A50		Adjust plate	1
A51		Guide screw	1
A52		Coupler lever	1

0A53		Intermediate lever retainer plate assembly (A53, A54, A56, A57, A61, LW13)	1
A54	*	Intermediate lever A	1
0A55		Intermediate lever B assembly (A55, A60)	1
A56	*	Actuator lever	1
A57	*	Intermediate lever shaft A	1
A58		Intermediate lever shaft B	1
A59		Intermediate lever spring hanger	1
A60	*	Intermediate lever stud	1
A61	*	Actuator lever shaft	1
A62		Intermediate lever spring	1
A64		Light seal B	1
A65		Light seal C	1
A67	*	Light seal plate B	1
A69	*	Light seal rivet	2

B01	o	Prism seat	1
0B02		Mirror housing assembly (B02, B21, B76, R304)	1
B03	o	Ground glass frame	1
B05	o	Ground glass mask	1
B06	o	Prism retainer plate	1
B07	o	Prism cover	1
0B08	o	Magnifier retainer assembly (B08, B78)	1
0B09	o	Prism side protector assembly (B09, B33)	2
0B10	o	Mirror seat assembly (BIO, B11, B12, B15, B42, B48, B49, B50)	1
B11	* o	Mirror hinge	1
B12	* o	Mirror retainer plate	1
B13	o	Mirror seat rest screw	1
B14	o	Mirror seat rest	1
B15	* o	Mirror seat lug	1
B16	o	Mirror check lever	1

B17	o	Mirror check lever screw	1
0B18	o	Mirror actuator lever, top, assembly (B18, B39, B51)	1
0B19	o	Mirror actuator lever, bottom, assembly (B19, B38, B58, B70)	1 1
0B20	o	Curtain actuator lever assembly (B20, B40)	1
B21	o	Light seal	1
B22	o	Light seal	1
B23	o	FP lever A	1
B24 *	o	FP lever B	1
0B25	o	Sync seat assembly (B25, B23, B24, B26, B64, B65, B66, B73, B74, B77)	1
B26 *	o	Sync seat insulator	1
0B27	o	Actuator lever assembly (B27, B28, B59, B67, B68, B84)	1
B28 *	o	Bottom actuator lever	1
B29 *	o	2nd dia lever checker plate	1
0B30	o	X lever assembly (B30, B32, B73, B75, B77, B80)	1
B31	o	X lever insulator	1
B32 *	o	X lever retainer plate	1
B33 *	o	Protector plate pin	2
B35	o	Mirror actuator lever shaft	1
B36	o	Mirror actuator lever retainer screw	1
B37 *	o	2nd dia lever checker plate rivet	2
B38 *	o	Mirror actuator lever spring hanger A	1
B39 *	o	Mirror actuator lever spring hanger B	1
B40 *	o	Curtain actuator lever stay	1
B41	o	Actuator lever spring hanger	1
B42 *	o	Mirror seat lug stud	1
B43	o	Curtain actuator lever retainer screw	1
B44	o	Mirror seat spring	1
B45		Prism retainer spring	2

B46	o	Mirror check lever spring	1
B47	o	Bottom actuator lever spring	1
B48 *	o	Mirror seat lug rivet	2
B49 *	o	Mirror retainer plate rivet	2
B50 *	o	Mirror hinge shaft	1
B51 *	o	1st dia lever pin	2
B52 *	o	Dia lever support	1
B53 *	o	1st dia lever	1
0B54	o	2nd dia lever assembly (B54, B29, B37, B69)	1
B55	o	2nd dia lever retainer screw	1
B56 *	o	1st dia lever shaft	1
B57 *	o	1st dia lever spring	1
B58 *	o	Mirror actuator lever, bottom, stud	1
B59 *	o	2nd dia lever adjust screw	1
B60 *	o	Supporter column	2
B61	o	Light seal	1
B62	o	X lever retainer screw	2
B63	o	Focus adjust screw	3
B64 *	o	Contact A	2
B65 *	o	Contact B	2
B66 *	o	Sync lever rivet	6
B67 *	o	Actuator lever collar	1
B68 *	o	Actuator lever shaft	1
B69 *	o	Dia lever spring hanger A	1
B70 *	o	Dia lever spring hanger B	1
B71	o	Mirror housing retainer screw	2
B72	o	Dia lever spring	1
B73 *	o	Cord B	2
B74 •	o	Tube A	1
B75 *	o	Tube B	1
B76 *	o	Actuator lever column	1
B77 *	o	Lug plate	2

B78	*	o	Magnifier cusion 1
B79		o	Ground glass holder 2
B80	*	o	X lever rivet 1
B81		o	Mirror hinge screw 3
B83		o	Mirror checker spring 1
B84	*	o	Actuator lever coupler spring 1
B85		o	Actuator lever spring 1
B86		o	Mirror shock absorber 1

0C01		o	Top mec plate assembly (C01, C41, C43, C79, E20, E22, E26, E27, E28, E81, E120) 1
0C02		o	Bottom mec plate assembly (C02, C45, C46, C47) 1
C01			Rapid wind lever 1
C04		o	Non-return arm 1
C0S	*	o	Lever seat lug 1
C06	*		Counter advance lug 1
0C07			Advance lug actuator assembly (C07, C06, C65, C66, C77) 1
C08	*		Retainer lug 1
C09	*		Retainer lug spring 1
0C10		o	Lever stopper assembly (CIO, C44) 1
Cll		o	Stopper 1
C12			Counter dial 1
C13		o	Top take-up spool brim 1
C14		o	Bottom take-up spool brim 1
CI5		o	Coupler lever 1
0C16		o	Coupler lever seat assembly (C16, C48) 1
0C17		o	Pin adjust plate assembly (C17, C51, C76. set screw tapered 1.7x2) 1
C18		o	Half moon washer 1
C19	*	o	Spring 1

C20		Top 1st gear	l
0C21	o	Top 2nd gear assembly (C21, C22)	1
C22 *	o	Top 3rd gear	l
C23 *	o	Top main gear	1
C24	o	Bottom main gear	1
C25	o	Bottom 1st gear	1
C26	o	Bottom 2nd gear	1
0C27	o	Bottom 3rd gear assembly (C27, C30)	1
0C28		Transport gear assembly (C28, C83)	1
C29	o	Sprocket	1
C30 *	o	Sprocket shaft	1
0C31	o	Wind-up shaft assembly (C31, C23, C32, C57, C75)	1
C32 *	o	Wind-up shaft bearing	1
C33	o	Take-up spool shaft	1
0C34		Rapid wind lever shaft assembly (C34, C60, C85, C88, LW10)	1
0C35		Wind-up lever seat assembly (C35, COS, C19, C49, C59, C74, C81).....No. 1-5	1
C36		Actuator plate retainer screw	1
C37 *		Counter dial window	1
C38		Lever seat collar	1
0C39		Cover ring assembly (C39, C37)	1
C40	o	R button	1
C41 *	o	Top 1st gear column	1
C42	o	Stopper column	1
C43 *	o	Non-return arm seat	1
C44 *	o	Spring hanger column	1
C45 *	o	Bottom 2nd gear shaft	1
C46 *	o	Bottom 1st gear shaft	1
C47 *	o	Coupler lever collar	2
C48 *	o	Coupler lever shaft	1
C49 *	o	Lever seat rivet	1

C50		Counter advance stud	1
C51 *	o	Coupler lever pin	1
C52	o	R lever retainer screw	1
C53 *		Retainer lug screw	1
C54		Counter retainer screw	1
C55	o	Bottom 2nd gear screw	1
C56	o	Sprocket screw	1
C57 *	o	Wind-up shaft spring	1
C58	o	Take-up spool spring	1
C59 *	o	Lever seat lug spring	1
C60 *		Counter spring	1
C61	o	Non-return arm spring	1
G62	o	R lever spring	1
C63	o	Sprocket seat spring	1
C64	o	Spring washer	2
C65 *		Advance lug spring	1
C66 *		Advance lug rivet	1
G68	o	Stopper washer A	2
C69	o	Stopper washer B	1
C70	o	R lever	1
C7l	o	Slow speed spring	1
C72	o	Bottom mec plate retainer screw	4
C73	o	Rapid wind lever retainer screw	2
C74 *		Spring retainer screw	1
C75 *	o	Top main gear retainer screw	1
C76 *	o	Pin adjust plate stud	1
C77 *		Advance lug spring hanger	1
C78	o	Bottom 2nd gear spring	1
C79 *	o	Gear column pin	1
C80	o	Coupler lever retainer screw	1
C81 *	o	Lug spring retainer screw	1
C82 *		Actuator stopper	1

C83	*	Counter dial stopper A	1
C84	*	Counter dial stopper B	1
C85	*	Counter shaft	1
0C86		Counter housing assembly (C86, C08, C09, C53, C82, C84, small screw FM 1.4 x 1.8)	1
C87	o	Light seal	1
C88	*	Counter shaft bearing, bottom	1
C89	*	Reset lever	1
0C90		Reset lever assembly (C90, C89)	1
C91		Reset lever spring	1
C92	o	Stopper nut	1
C93		Reset lever spring hanger	1

D01	*	Hoof spring	1
D02	*	Cocking wheel	1
D03	*	Reminder dial stud	1
D04		Shaft bearing	1
D05		Rewind shaft	1
0D06		Rewind knob assembly (D06, D01, D07, D10, Dll, D12, D13, D15>	1
D07	*	Rewind cover ring	1
0D08		ASA dial assembly (D08, D02, D03, D09, D16, D18)	1
D09	*	Dial retainer nut	1
D10	*	Crank	1
Dll	* o	Nipple	1
D12	*	Crank shaft	1
D13	* o	Crank pin	1
D14	*	Shaft spring	1
D15	*	Retainer ring	1
D16	* o	Dial seat spring	1
0D17		Nut assembly (D17, D14)	1
D18	*	ASA dial	1

E01	o	Top shaft plate	1
EO2	o	1st curtain shaft plate	1
E03 *	o	1st curtain edger	1
E04 *	o	2nd curtain edger	1
E05	o	Release plate	1
0E06	o	Bulb lever assembly (E06A, E06B, E71, E72, B78, E87, set screw flat 1.4x2.5)	1
E06A *	o	Top bulb lever	1
E06B *	o	Bottom bulb lever	1
E07	o	1st curtain checker arm	1
E08	o	Spill	1
E09	o	Spill receptacle plate	1
0E10	o	Pinion coupler lever assembly (El0, E75)	1
0E11	o	2nd curtain pinion assembly (Ell, E32, E49)	1
E12 *	o	1st curtain pinion	1
E13	o	Coupler pinion	1
0E14	o	Bottom selector gear assembly (E14, E44, E73)	1
0E15	o	Top selector gear assembly (E15, E43, E70, E77, E84)	1
0E16	o	Bottom idling gear assembly (E16, E19)	1
E17	o	Top idling gear	1
0E18	o	Coupler gear assembly (E18, E45, E46)	1
E19 *	o	Idling gear collar	1
E20 *	o	Idling gear shaft	1
E21	o	Spill rest	1
E22 *	o	Spill rest collar	1
E23	o	Speed dial	1
E24	o	Index ring	1
E25	o	Selector collar	1
E26 *	o	Selector gear shaft	1
E27 *	o	Bulb lever shaft	1
E28 *	o	1st curtain checker arm seat	1

E29	o	Shutter rod	1
E30	o	Actuator rod	1
E31 *	o	1st curtain pinion shaft	1
E32 *	o	2nd curtain pinion shaft	1
E33 *	o	1st curtain shaft	1
E34	o	Curtain roller, small	1
E35 *	o	1st curtain wind shaft, top	1
E36 *	o	1st curtain wind shaft, bottom	1
E37 *	o	Curtain roller bearing	2
0E38	o	Curtain roller, large, assembly (E38, E37)	1
E39 *	o	2nd curtain pipe	1
E40 *	o	2nd curtain wind shaft bearing, bottom	1
E41 *	o	Wind shaft bearing	2
E42	o	Curtain spring adjust lug	2
E43 *	o	Top selector gear stud	1
E44 *	o	Selector gear retainer ring	1
E45 *	o	Slow speed lever actuator stud	1
E46 *	o	Coupler gear stud	1
E47 *	o	Edger rivet	4
E48	o	Bulb lever nut	1
E49 *	o	Pinion retainer pin	2
E50	o	Idling gear retainer screw	1
E51	o	1st curtain checker arm retainer screw	2
E52	o	Pinion coupler lever retainer screw	1
E53	o	Coupler gear retainer screw	1
E54	o	Adjust lug screw	2
E55 *	o	Pinion shaft retainer screw (Only 2 supplied with 0E64)	3
E56	o	Cam shaft spring	1
E57	o	Shutter rod spring	1
E58	o	Spill spring	1
E59 *	o	2nd curtain spring	1

B60	o	Adjust lug spring A	1
E61	o	1st curtain checker arm spring	1
E62	o	Bulb lever spring	1
E63	o	Pinion coupler lever spring	1
0E64	o	1st curtain assembly (E64, E03, E12, E31, E33, E35, E36, E47, E49, E55, E90, E91, E95, E96)	1
0E65	o	2nd curtain assembly (E65, E04, E39, E40, E41, E47, E59, E67, E74, E94)	1
E66	o	Coupler lever spring hanger	1
E67 *	o	Curtain pipe	1
E68	a	Speed selector disc	1
E69 *	o	Cam shaft	1
E70 *	.3	Speed selector pin	1
E71 *	o	Bulb lever collar, top	1
E72 *	o	Bulb lever collar, bottom	1
E73 *	o	Retainer ring rivet	1
E74 *	o	2nd curtain wind shaft metal, top	1
F75 *	o	Pinion coupler lever pin	1
E76 *	o	Cam shaft nut	1
E77 *	o	Selector gear stopper	1
E78 *	o	Bulb coupler spring	1
E79	o	Cam shaft spring receptacle	1
E80	o	'Cocked' indicator	1
E81 *	o	'Cocked' indicator shaft	1
E82	o	'Cocked' indicator spring	1
E83	o	Click spring	1
E84 *	o	Selector gear stopper rivet	1
0E85	o	High speed cam assembly (E85, E69, E76)	1
E96	o	1st curtain checker arm stopper	1
E87 *	o	Bulb lever adjust nut	1
E88		Coupler pinion screw	1
E89	o	2nd curtain shaft plate	1

E90	*	o	1st curtain wind shaft bearing, top 1
E91	*	o	1st curtain wind shaft bearing, bottom 1
E92		o	Curtain spring adjust gear A 1
E93		o	Curtain spring adjust gear B 1
E94	*	o	2nd curtain shaft 1
E95	*	o	1st curtain pipe 1
E96	*	o	1st curtain spring 1
E97	*	o	Bounce stopper 1
E98		o	Bounce stopper actuator lever 1
E99		o	Bounce stopper lever 1
E100		o	Bounce stopper actuator lever screw 2
E101	*	o	Bounce stopper rivet 1
E102		o	Bounce stopper spring 1
E103		o	Bounce stopper lever screw 1
0E104		o	Sync gear assembly (E104, E97. E101, El11, E115) 1
E105		o	Sync gear column
E106	*	o	X contact A
0E107		o	X contact B assembly (E107, B64, B65, B66, E106, E108, E109, E112) 1
E108	*	o	X contact seat 1
E109	*	o	X insulator 1
El10		o	X contact support 1
Elll	*	o	X contact pin 1
El12	*	o	X contact column 2
E113		o	X contact retainer screw 1
El14		o	Adjust lug spring B 1
E115	*	o	Insulator tube 1
El16		o	Bounce stopper lever retainer 1
E117		o	Selector shaft tube retainer screw 1
El18	*	o	Shutter rod receptacle 1
El19		o	Release plate nut 1
E120	*	o	Gear shaft rivet 5

F01	o	Slow speed cam	1
0F02	o	Cam coupler plate assembly (F02, F10)	1
F03	o	Time stopper	1
0F04	o	Bottom adjust plate assembly (F04, F12)	1
0F05	o	Top adjust plate assembly (F05, F06, F07, F08, F09, F14, F15, F17, F19, W2)	1
F06 *	o	Slow speed actuator lever	1
F07 *	o	Slow speed lever	1
F08 *	o	Slow speed Jever collar	1
F09 *	o	Lever support nut (Only 1 supplied with 0F05)	2
F10 *	o	Cam coupler plate stud	1
F11	o	Cam coupler plate nut	1
F12 *	o	Slow speed rod	1
F13	o	Slow speed rod receptacle	1
F14 *	o	Lever support	1
F15 *	o	Slow speed lever seat	1
F16	o	Slow speed spring	1
F17 *	o	Slow speed actuator lever stud	1
F18	o	Adjust plate screw	1
F19 *	o	Slow speed lever retainer screw	1
F20	o	slsw speed cam retainer screw	2

0G00	o	Slow speed governor assembly (G01—G19)	1

AF12	o	Mirror	1
AF17	o	Pentaprism	1
AF18	o	Ground glass	1
0AF20	o	Magnifier front element assembly (AF20, 1AF21)	1
AF21 *	o	Magnifier rear element	1
AF22	o	Fresnel lens	1

0H01	Self-timer box assembly (H01, H03, H04, H05, H06, H07, H08, H10, H45)	1
0H02	Self-timer box cover assembly (H02, H09)	1
H03 •	Spring	1
H04 *	Self-timer box lug	1
H05 *	Self-timer box lug shaft	1
H06 *	Spring hanger	2
H07 *	Lug stopper	1
H08 *	Lug spring	1
H09 *	Cover stud	1
H10 *	Hook	1
H45 *	Hook retainer rivet	1
0H00	Self-timer governor assembly (H11-H44, H46)	1

LIST OF STANDARD PARTS

Product No. 232

ASAHI PENTAX SV

Small Screws

Index No.	Name		Surface Treatment	Place of Use	Quantity
1	Flat medium	1.2x1.6	Nickel plated	G02, G13	2
			Black	E112, B77	2
			Black	G04. G14	2
2	"	1.4x1.2	Black	D01, D06	2
3	"	1.4x1.4	Black	F03. C02	2
24	"	1.4x1.8	Black	C82. C86	1
4	„	1.4x2	Black	A49, A50	2
				C82, C86	1
				A01. G01	2
				B52, B60	2
				B02. B22	2
5	"	1.4x3	Black	F04, F05	1
7	"	1.7x1.8	Black	B02, B47	1
				A01, A07	2
8	"	1.7x2	Black	A01, H12	2
				A01, A06	2
				A01, A53	1
9	„	1.7x2.5	Black	A01, A48	2
				A01, A89	1
				A01, E108	1
				AO1, E83	2
				A01, D04	2
				A01, C02	1
				B02, B25	2
				B01, B08	2

Index No.	Name		Surface Treatment	Place of Use	Quantity
11	Flat medium	1.7x3	Black	A01, B02	2
				A01, A08	1
				C16, C47	2
12	"	1.7x3.5	Black	C11, C42	1
13	"	1.7x5	Black	B01, B02	3
14	"	2x3	Black	C17, C24	1
15	"	2x4.5	Black	A01, C10	2
25	Round flat medium	1.4x2	Black	D02, H02	3
16	Saucer medium	1.7x2.2	Chrome plated	A04, A20	2
				A01, A28	2
17	"	1.7x3.5	Black	A01, C32	3
				A01, A20	2
				A01, A10	3
				C32, C34	3
18	"	2x3.5	Chrome plated	A01, A03	2
				A01, A04	2
19	Round saucer medium	1.7x3	Chrome plated	A01, A03	2
				A01, A05	4
20	Set flat	1.4x2.5	Nickel plated	E06A, E06B	1
21	"	1.7x4	Nickel plated	C01, B09, AF17	2
22	"	1.7x4.5	Nickel plated	A01, C11	1
26	Set tapered	1.4x1.6	Black	C39, C86	3
23	"	1.7x2	Nickel plated	A01, D04	2
				C17, C24	2
				E24, E26	3
				E23, E68	3

Washers (Note: Asterisk * donote quantity which is subject to change.)

Code	Material	Thickness (mm)	Place of Use	Quantity
W2	Steel	0.03, 0.05. 0.1	0H00	2*
			F09, F14	1*
	Brass	0.4	E10	1
W3	Steel	0.3	A51	2
		0.1	E18	1
			E99	1
	Phosphor-bronze	0.2	E98	2
W5	Steel	0.05, 0.1, 0.2	B02. B54, B55	1
			A01, A05	4*
W8	Phosphor-bronze	0.1	B02, B35	1
W9	Brass	0.4	C70	1
W10	Steel	0.05	C26	1
W11	Phosphor-bronze	0.1. 0.15, 0.2, 0.5	A27	2*
			F12	1*
			E26	1*
W12	Phosphor-bron2e	0.05. 0.07, 0.1	B18, B35	1*
			B19. B35	1*
W13	Steel	0.3	A27	2
W14	Phosphor-bronze	0.15	A57	1
		0.1	E105	1
W16	Steel	0.05. Oil	C35, C38	1
W17	Bakelite	0.4	C13, C31	1
	Steel	0.2	C14, C24	3
W18	Steel	0.1	D02. D09	1
W21	Steel	0.05. 0.1	C48	1
W22	Phosphor-bronze	0.7. 0.8	C30	1
W25	Phosphor-bronze	0.05. 0.1	D04	1*

Lock Washers

Code	Material	Thickness (mm)	Place of Use	Quantity
LW10		0.2	C41	1
			C85	1
			B76	1
LW13		0.3	A45	1
			A57	1
			A58	1
			E33	1
			E94	1
			E105	1
			F12	1
LW17		0.4	E50	1
„	(Black)	„	A36	2